


## How to replace X wire

1. Put the scanner on the side and remove the bottom plates with an Allen key.



2. Pull one loop from the wire over the screw. See picture below.

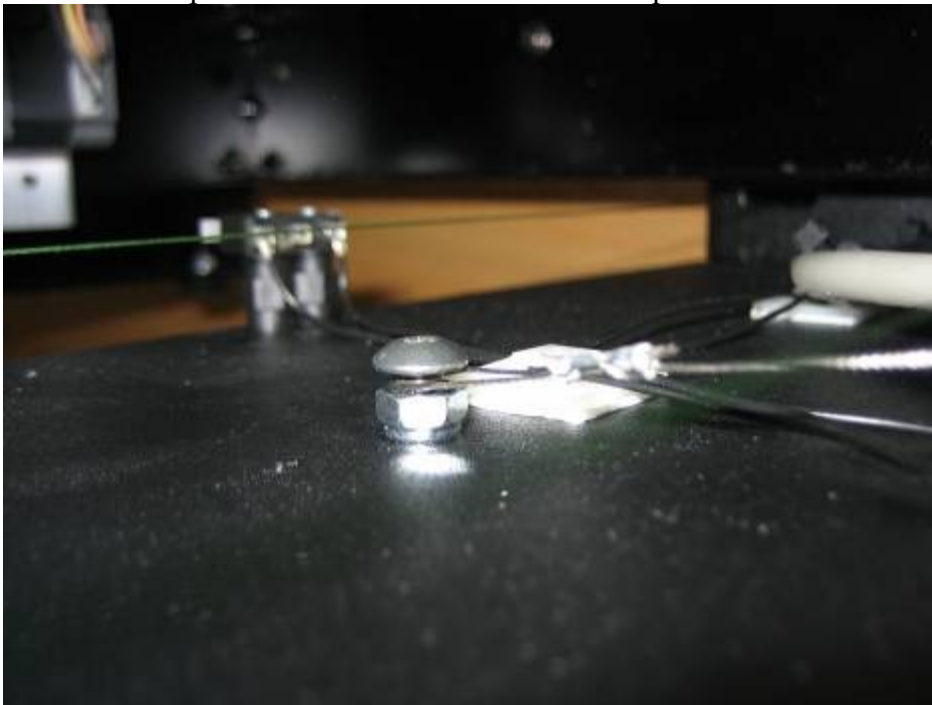


3. Pull the wire on the brass wheel on the right side.




4. Pull the wire over to the other side with the motor.




5. Pull the wire as the picture shows.

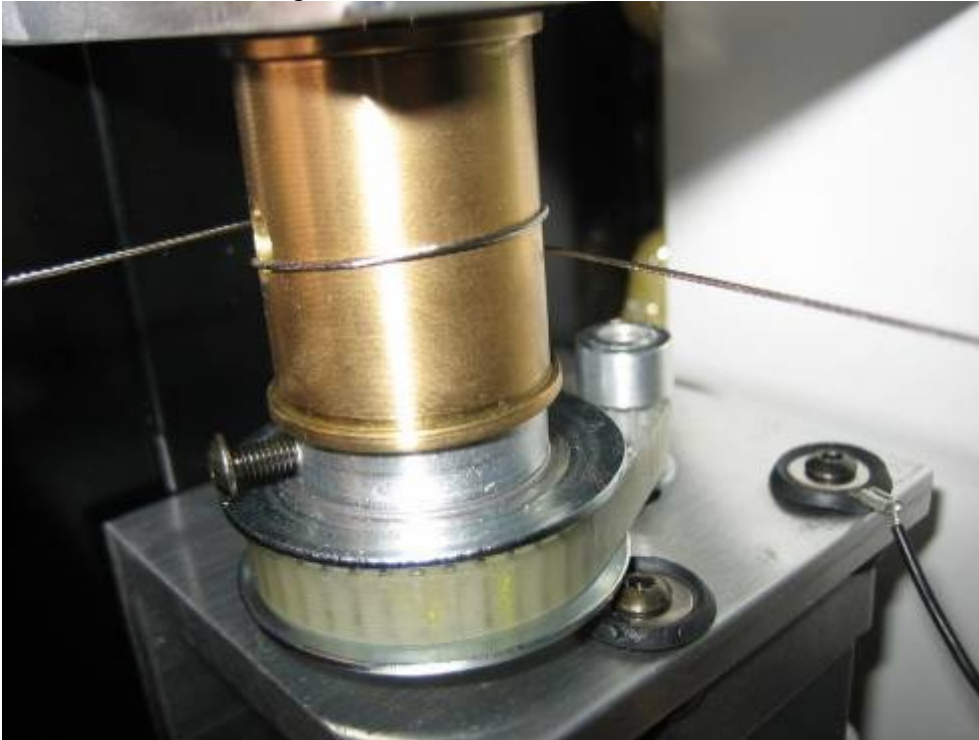

6. Pull the wire 3 turns around the brass wheel. See picture to compare.

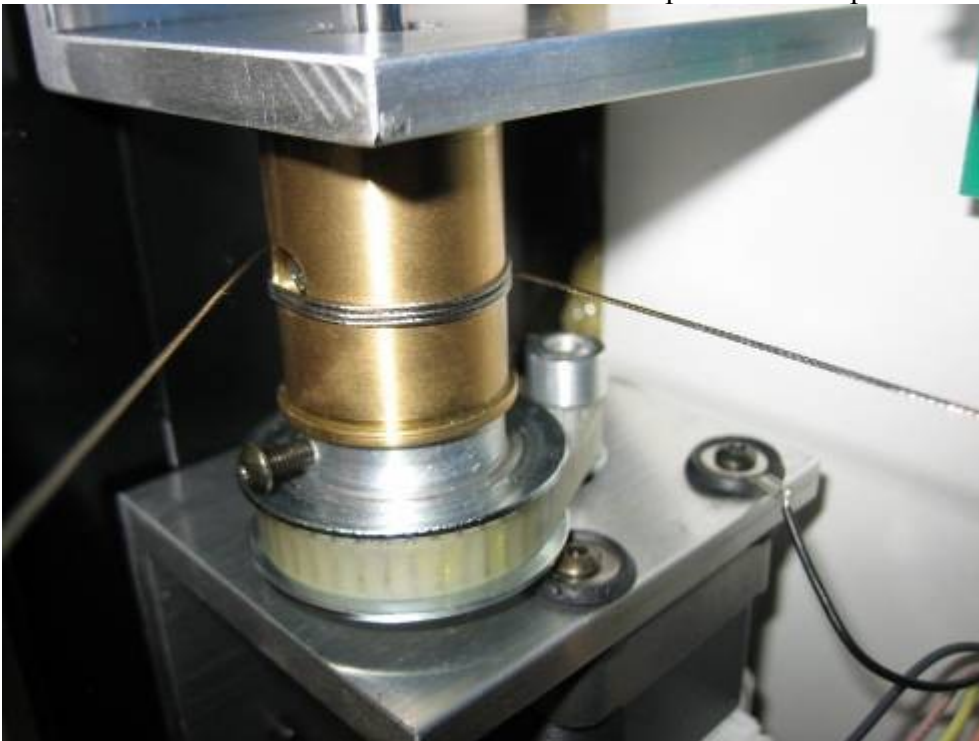

7. Pull the second loop over the same screw as in picture 2.

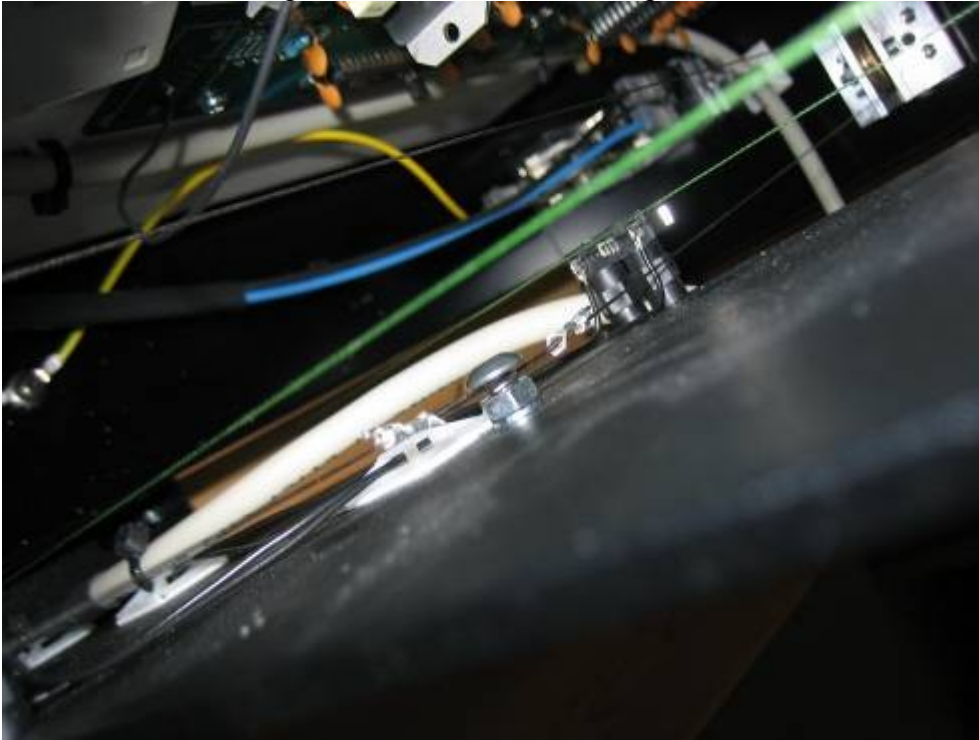

8. Stretch the wire just right with the 2 screws on the outside. Use an Allen key. See picture.



9. Mount the bottom plates and the scanner should work again.



Screws for tighten the X-wire.

